

 
Installation Instructions

RollEase Skyline Single Shade System - Cassette 80/120


CBM Roller Shades: Your roller shade package contains brackets and screws for mounting the shade in any position on the window. The package should display a label that specifies the corresponding room name and window opening number as well as the mount option (inside/exact/outside).

Tools needed: Cordless drill with #8 Robertson drive attachments, standard flat head screwdriver, tape measure & pencil.


Parts included: Installation brackets & installation screws.

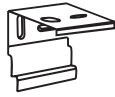

Installation bracket
Cassette 80

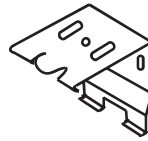


Installation bracket
Cassette 120

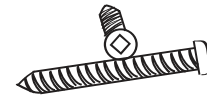


Installation screws

1 - Mount the brackets: Cassette roller shades can be installed inside or outside the window frame. If your custom cassette shade was specified to be an inside mount, refer to section 1A, otherwise skip to section 1B.


1A: Ceiling/inside mount: Each cassette roller shade requires a minimum of two brackets. End brackets must be installed at least 2" from each end of the headrail (fig 1A.1). For wider shades that require 3 or 4 brackets, these should be spaced evenly between the two outermost brackets. Note that for cassette 80 brackets, the release tab is always mounted on the bottom (fig 1A.2). For cassette 120 brackets, the release tab is always mounted on the top. (fig 1A.3)

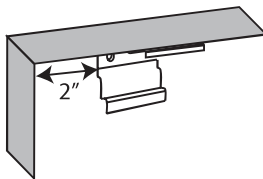

1A.1

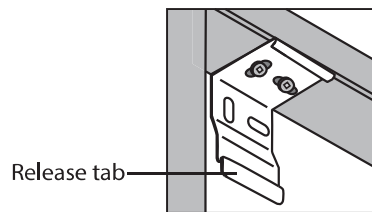


1A.2 Release tab on the bottom

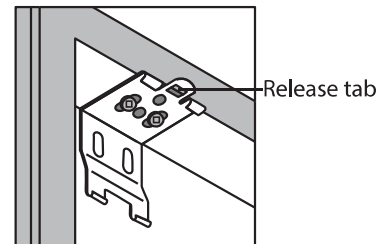


1A.3 Release tab on the top


1B: Wall/outside mount: Each cassette roller shade requires a minimum of two brackets. First, mark the position of the headrail on the wall. Make a second mark 1/8" above the first mark (fig 1B.1). This will be the position for top of the brackets and will allow room for bracket head. Using a level for this step is highly recommended. End brackets must be mounted at least 2" from each end of the headrail. For wider shades that require 3 or 4 brackets, these should be spaced evenly between the two outermost brackets. Finally, mount the brackets using two screws per bracket. Note that for cassette 80 brackets, the release tab is always mounted on the bottom (fig 1B.2). For cassette 120 brackets, the release tab is always mounted on the top. (fig 1B.3).

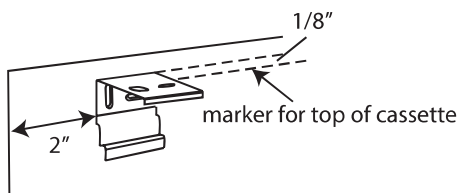

1B.1

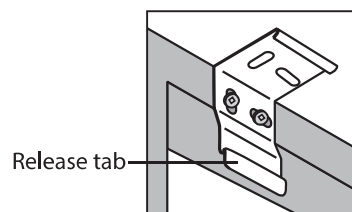


1A.2 Release tab on the bottom

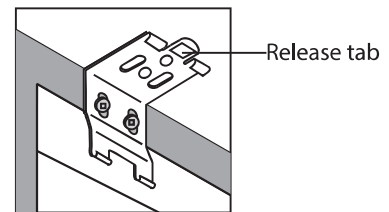


1A.3 Release tab on the top

Installation Instructions

2. Mount the cassette headrail: For Cassette 80: Position the cassette with the front panel (A) resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place (B). See illustration below.

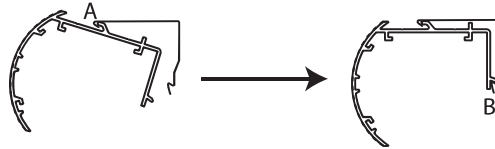

For Cassette 120: Position the cassette headrail with the back panel (A) resting on both bottom hooks of all brackets. Push the front of the headrail firmly upwards and towards the window until the groove at the top of the headrail snaps into place (B). See illustration below.

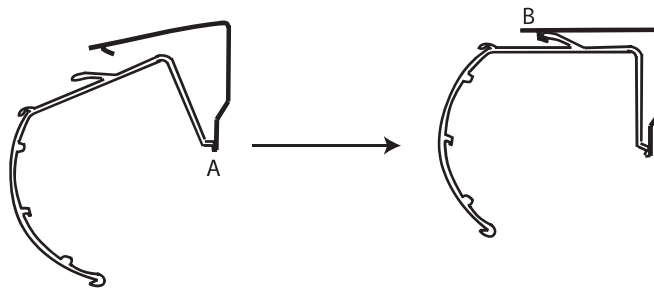

5. Installing the tension device: The tension device reduces the hazards of strangulation and entanglement of young children by limiting access to control chain. It must be installed for the shade to be operable. Anchor the tension device, that is attached to the shade's control chain, to the window frame or wall so that young children cannot put the chain around their necks. To install, lower the shade all the way down, hold the tension device upright as shown in the diagram. Position the tension device on the window frame or the wall so that tension device and control chain do not interfere with raising or lowering of the shade. Fasten the screws through the holes to secure the tension device.



Cleaning: CBM roller shades can be cleaned or dusted with a feather duster, soft cloth or an appropriate vacuum suction attachment. Do not use cleaning liquids or detergents. Use of such chemicals will void your warranty.



WARNING/MISE EN GARDE

Young children can **STRANGLE** in cord and bead chain loops. They can also wrap cords around their necks and **STRANGLE**.

Always keep cords and bead chains out of children's reach.

Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Attach tension device to wall or to floor. This can prevent children from pulling cords and bead chains around their necks. Fasteners provided with the tension device may not be suitable for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.

For more safety information: 1-866-662-0666