


Installation Instructions


CBM Vertical Blinds: Your blind package contains brackets & screws for mounting the blind in any position on the window. The package should display a label that specifies the corresponding room name and window opening number as well as the mount option (inside/exact/outside).

Tools needed: Cordless drill with #8 Robertson drive attachments, standard flat head screwdriver, tape measure & pencil.

Parts included: Installation brackets, valance return clips & installation screws.

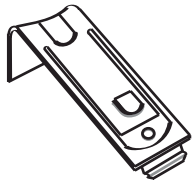

Outside or wall mount brackets

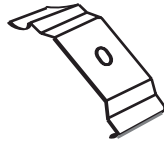

Inside or ceiling mount brackets



Square return clips




Installation screws


1A - Inside Mount/Inside Window Frame Installation: For inside mount vertical blinds, the groover valance must be installed before installing the brackets. Use the holes on the valance to line it up on the window sill. Then position the brackets on the mounting surface, approximately 6" from each end of the track, and at least 1-3/4" from the back of the window frame. Then mount the bracket using one screw per bracket.

1B - Outside Mount/Outside Window Frame Installation: For outside mount vertical blinds, the groover valance is installed after installing the track and vanes. First, mark the position of the track. Clip one vane to a carrier and place track and vane over the opening to be covered. Make sure to leave at least 1/2" clearance below the vanes. Then mark the position of the track. Second, mark the position of the brackets. Make a mark 1/4" above the first mark (allowing room for the bracket head) for the brackets. We highly recommend using a level for this step. Finally, mount the L-shaped brackets using two screws per bracket.

Note: When more than two brackets are supplied, position the additional brackets evenly between the two end brackets.


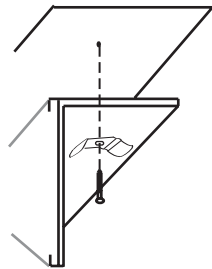


1A - Bracket installation for inside mount

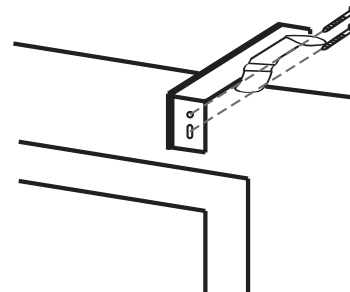

1B - Outside or wall mount bracket installation


2. Fitting the track into brackets: Insert the front panel of the bracket inside the top groove of the track. Then push the back up till it snaps into the bracket.

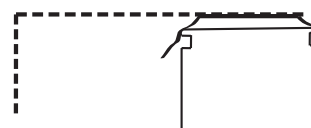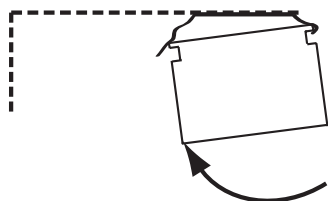


Installation Instructions

3. Aligning/realigning the vane carriers: Before installing the vanes into the carriers, it is important to make sure the carriers are properly aligned as shown in the figure below. Follow these steps to align the carriers,


- Pull the chain until the carriers stop rotating. The carriers should turn together and face the same direction.
- If some carriers seem to be misaligned, continue pulling the chain until you hear the cranking sound of the clutch operating. Keep pulling or turning until the misaligned carriers are automatically adjusted.

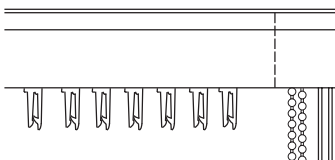

4. Installing the vanes: Before installing the vanes, please make sure that the carriers are positioned correctly. Then insert the vanes into the carriers. Make sure all the vanes are facing the same direction (figure 4.1). To remove the vanes: First remove the carriers to the open position as illustrated in (figure 4.2), then slide a card between the vane and carrier clip to open the carrier sufficiently and remove the vane.

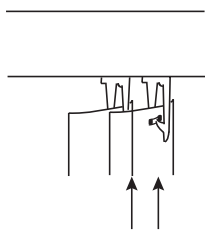


4.1 Installing the vanes

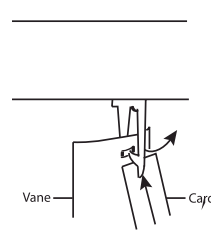

4.2 Removing the vanes

5. Installing the tension device (recommended): The tension device reduces the hazards of strangulation and entanglement of young children by limiting access to control chain and cord. It must be installed for the blind to be operable. Anchor the tension device, that is attached to the blind's controls, to the window frame or wall so that young children cannot put the chain around their necks. Position the tension device on the window frame or the wall. The device can be installed inside or outside without twisting the chain. Fasten the screws through the holes to secure the tension device.

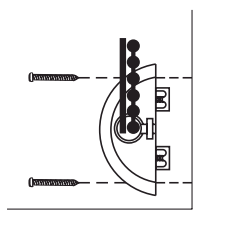

6. Cleaning: Dust the blinds using a feather duster or a moist cloth. Using a mild and diluted detergent is also okay. DO NOT use any chemicals or degreasers to clean the surface of the vanes, as they may cause fading or discoloration.



WARNING/MISE EN GARDE

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE. Always keep cords and bead chains out of children's reach.

Move cribs, play pens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords. Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.

Fasteners provided with the tension device may not be suitable for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.

For more safety information: 1-866-662-0666.