



ROLLER SHADES
CORDLESS CASSETTE

Installation Manual v1.1




#cbmblinds



CBM

Assembly Parts:

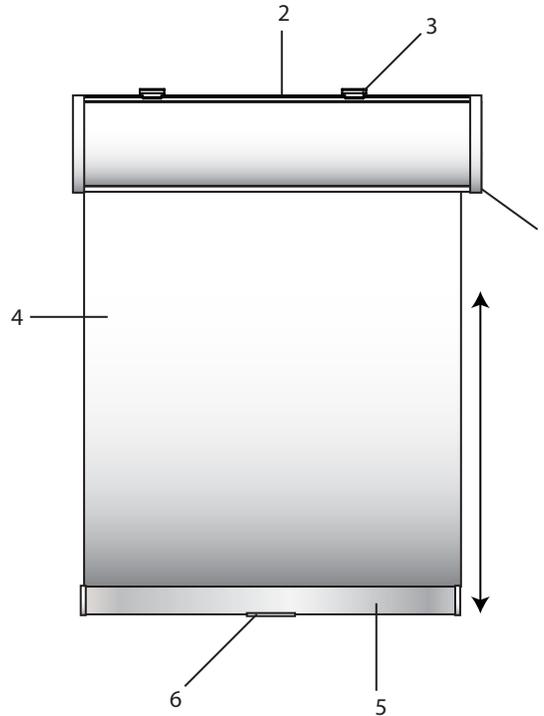


1. Controller
2. Cassette
3. Mounting Bracket
4. Fabric
5. Bottom Bar
6. Bottom Bar Handle

Parts Included:



Installation Screws

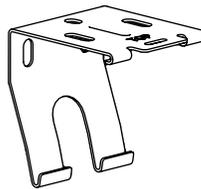

Universal Bracket


Tools Needed:



Pencil



Level

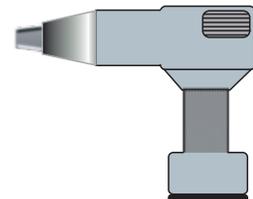


Cordless Drill


Bracket Installation:

INSIDE MOUNT:

Using a pencil, mark the positioning of the bracket at least 2" from each end.

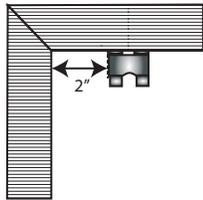


Use the hole on the top of the bracket to secure it using the provided screws (#2 Robertson).

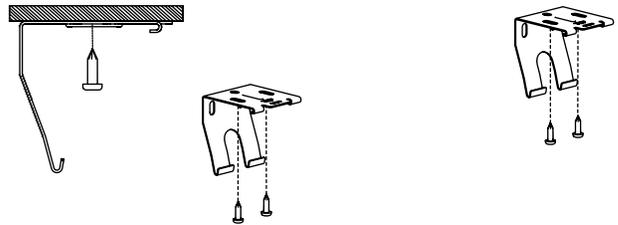


OUTSIDE MOUNT:

Using a pencil, mark the positioning of the bracket at least 2" from each end.

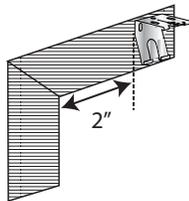


Use the holes on the back of the bracket to secure it using the provided screws (#2 Robertson). Using a level ensure the brackets are level with each other.

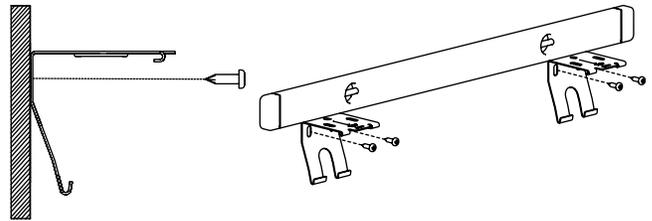


Cassette Installation:


Snap cassette into place by sliding groove in back of the cassette into the bottom of the mounting bracket.

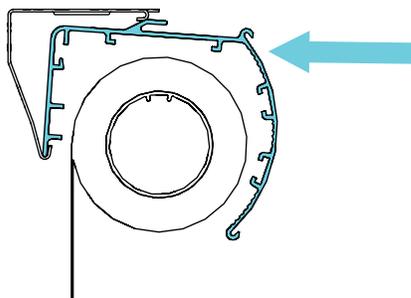

Push back and up snapping the headrail into the top of the mounting bracket.

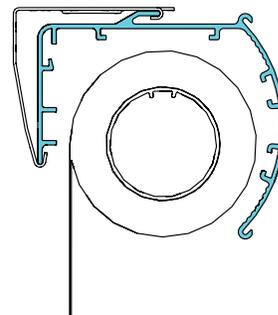


Cassette Removal:

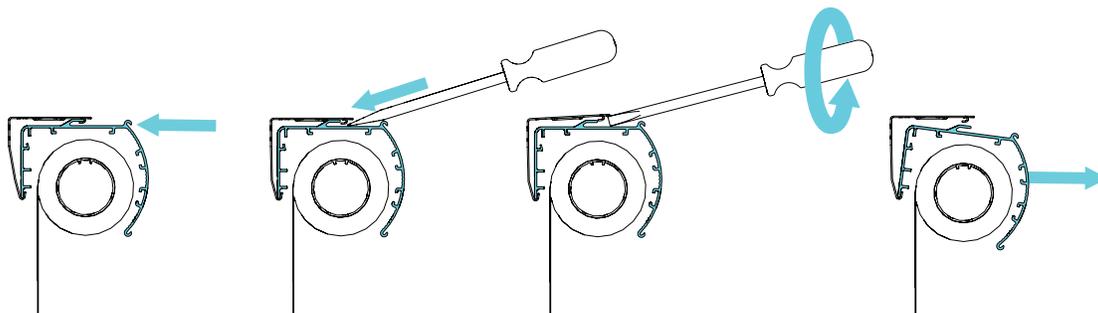

Shade Operation:

Using the handle attached to the bottom rail, move the bottom rail up or down to desired position.

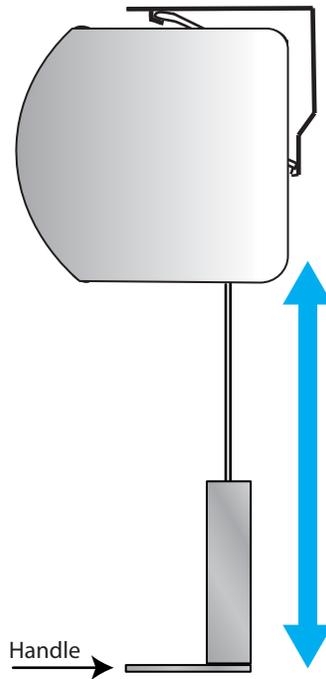

Troubleshooting:

PROBLEM	CAUSE	SOLUTION
1. Shade does not reach its bottom limit	Spring Tension is too high	<ol style="list-style-type: none"> 1. Raise the shade all the way up 2. Remove the cassette from the brackets 3. Remove the cover on the right (controller side) 4. Turn the adjustment screw clockwise to reduce tension. Please make adjustment in 1/4 turns 5. Install cassette 6. Lower shade to its desired lower limit. Note that reducing too much tension on the spring can lower the upper limit of the shade as well. 7. If needed, repeat the above process
2. Shade does not rise to its upper limit	Limiter tension is too low	<ol style="list-style-type: none"> 1. Raise the shade all the way up 2. Remove the cassette from the brackets 3. Remove the cover on the left (limiter side) 4. Turn the adjustment screw counter-clockwise. Please make adjustment in 1/4 turns 5. Install Cassette. 6. Lower the shade all the way to its lower limit 7. Raise the shade all the way up to desired limit. 8. If needed, repeat the above process