


MEASURING GUIDE

Follow these general guidelines to complete form on reverse and then use to complete on-line order



COMPETITION
BLINDS & CLOSETS

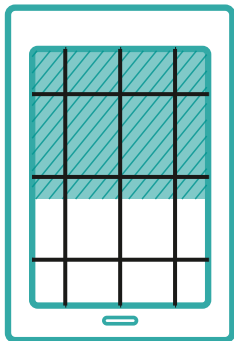

W1

W2

W3

H1 H2 H3

INSIDE MOUNT

Inside Mounted Blinds and Shades are designed to fit within the casing of the window for which they are measured.


The manufacturer will take all the necessary deductions to ensure a proper fit.

WIDTH

Measure tight to the nearest 1/8" (rounded down) at the top (W1), middle (W2) and bottom (W3). Record your measurement. Use the smallest measurement when placing an order.

HEIGHT

Measure tight to the nearest 1/8" (rounded up) at the left (H1), Center (H2), and Right (H3) side. Record your measurement. Use the largest measurement when placing an order.

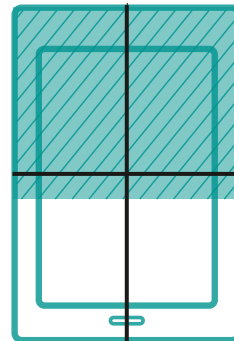

WIDTH

HEIGHT

OUTSIDE MOUNT

Outside Mounted Blinds and Shades are designed to fit and cover the window casing if present. No deductions will be made by the manufacturer other than the finished size of the material of a roller, solar and zebra shade.

WIDTH

Measure from left to right the entire width for which you wish to cover. Record the measurement. Remember, roller, solar and zebra shade material comes about 1 1/4" smaller than the ordered width.

Example: If the opening you wish to cover is 36" wide it is recommended to add 2" overlap to each side and order shade at 40" wide.

HEIGHT

Measure from top to bottom the total height you wish to cover. Record the measurement. Remember to include any additional overlap both above and below the window frame.